

# User Guide Light Up Recordable Domes (EL11346)




Set of four light up recordable domes that children can press to light up, change colours, record and play back sounds. The recording feature allows 30 seconds recording time, and there are 7 colour options, including an 8<sup>th</sup> colour blending option. The domes can be used on a flat surface or mounted to a wall and are suitable to use with 10 months and above.

Here is a quick guide to get you started. We hope you find it useful.

## What's in the box?

Each box contains:


- 4x light-up recordable domes
- 4x USB charging cables

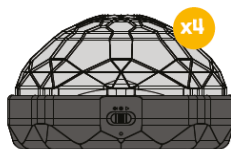

## Charging and switching the domes on


Before using the domes, make sure they are charged. Here is some charging information.

- Simply use the USB charging cables to charge the domes.
- The domes will take approximately 4 hours to fully charge.
- Once charged they can be used for approximately 8 hours.
- The switch to turn the domes on and off is on the base of the dome.

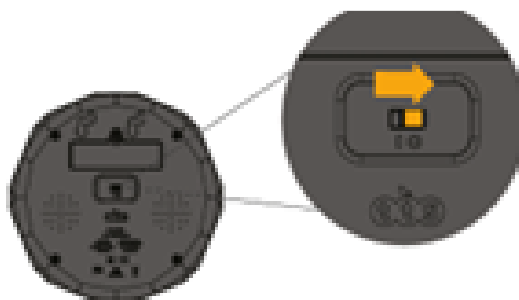

## Different settings for the domes

 
**Colour Mode-** Press the top of the dome to change colours. The domes feature 7 different colours, and the 8<sup>th</sup> press blends the colours.

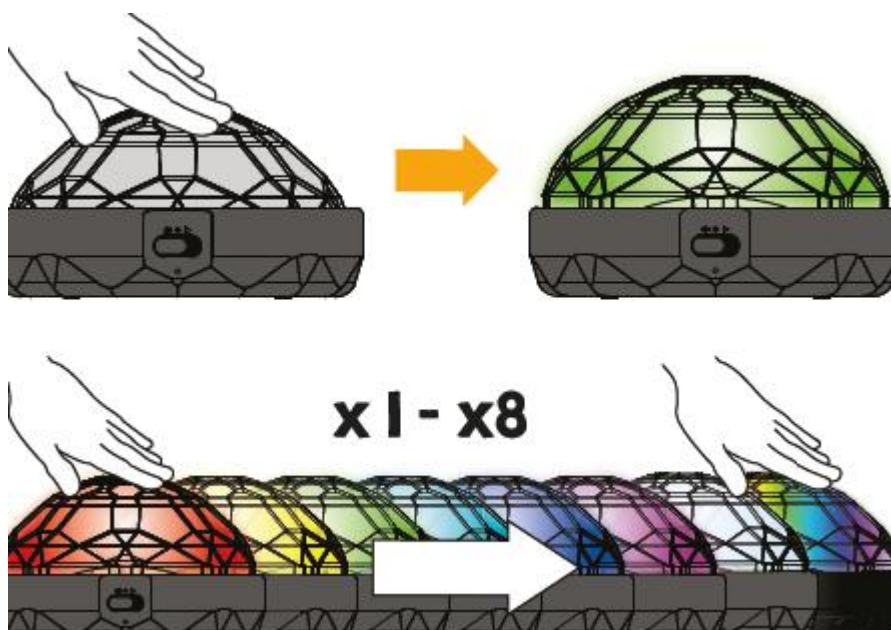

**Recordable Mode-** Set the domes onto the recordable mode with the slider.




Press the top of the dome. Speak to record and when you have finished press the top again to save the recording. Each dome has 30 seconds recording time.

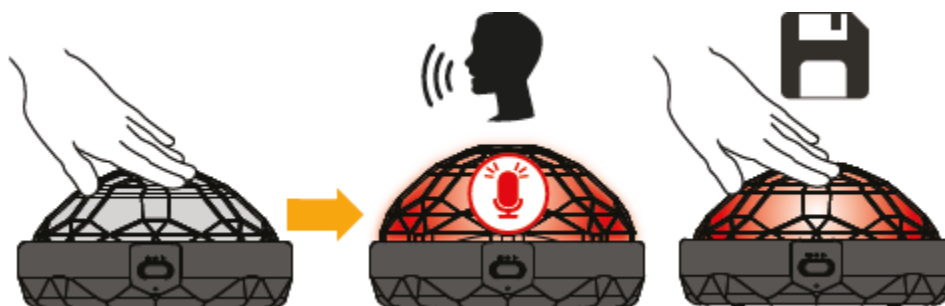

**Playback Mode-** Set the domes to the playback mode with the slider.



 Press the top of the dome and watch the colours scroll through all the colour sequence as it plays back the recorded message.

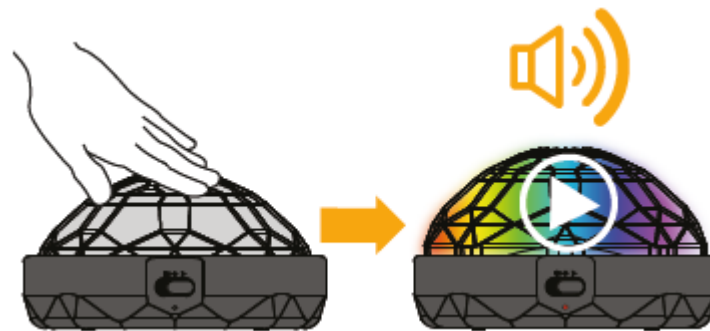

## Cleaning and Care

- Turn off the domes.
- Wipe the surface gently with a soft damp cloth.
- DO NOT submerge in water.
- Ensure completely dry before storing or turning them back on.

**The domes can be used for many different activities and can support a range of areas of learning. See our activity ideas for ways to use the domes.**